

Installation Guide For 8 Foot (2 piece) T8 Lamp





LOD-36WT88FTC40KB

LOD-36WT88FTC50KB


LOD-36WT88FTF40KB

LOD-36WT88FTF50KB


What you will need to install:

Part Name	Quantity	Photo
4' LED Lamp (A)	1	
4' LED Lamp (B)	1	
Quick Connect Aluminum	1	
Lock Screw	2	


Step 1: Take out the 4' LED lamp (A) and insert half the length (about 5.90") of the quick connect aluminum into the lamp (A).

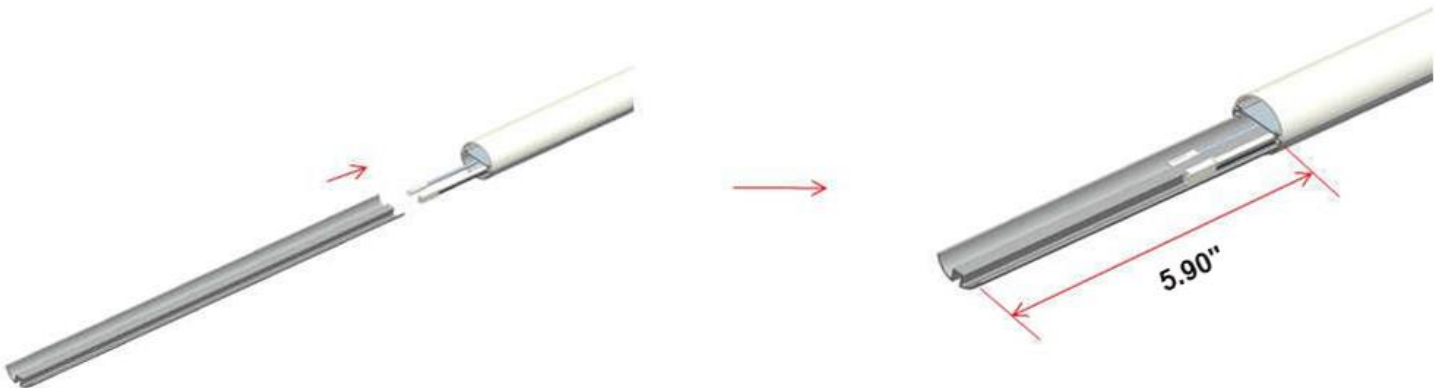

Step 2: Fasten the locking screw along the back-screw hole of lamp (A).

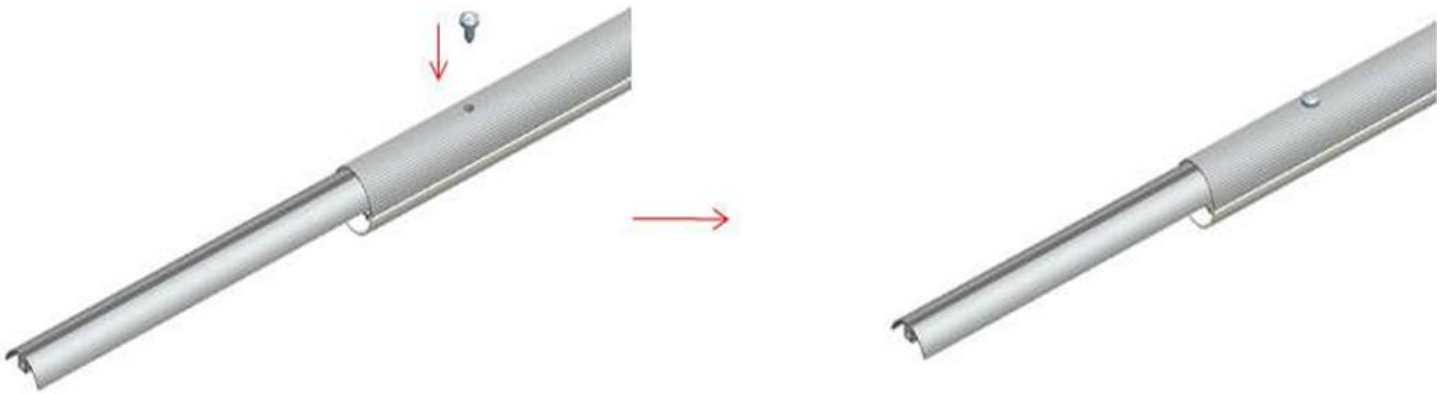


Step 3: Take out 4' LED lamp (B) and insert the connected quick connect aluminum into lamp (B). DO NOT insert it completely. Leave a proper spacing (about 1.96") between lamp (A) and lamp (B) for connecting the terminal.

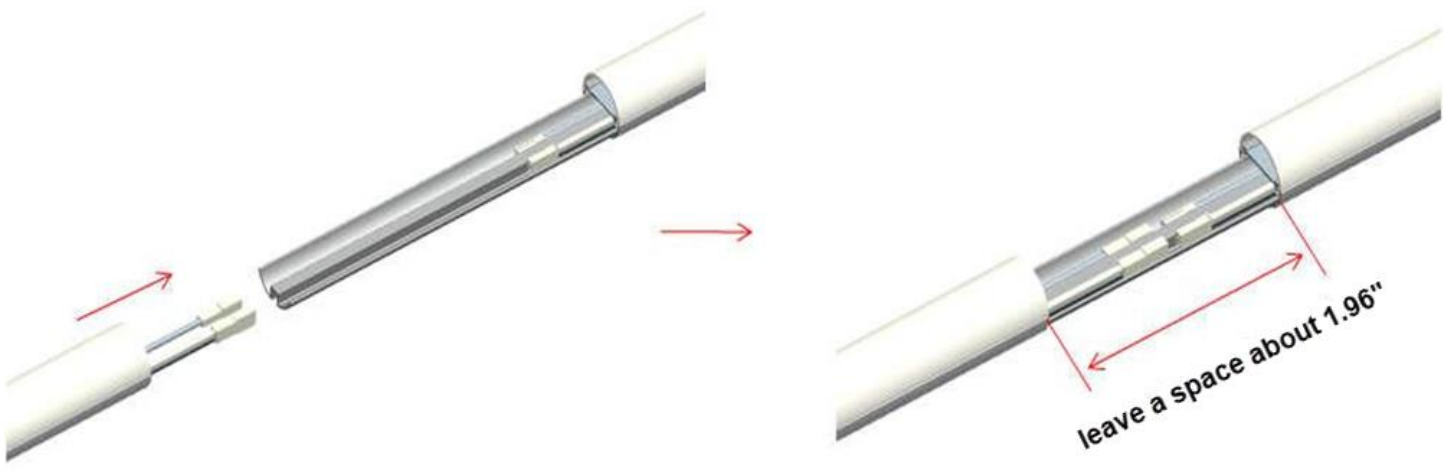

Step 4: Join the ends of the terminal lamp (A) and lamp (B). Press them together tightly.



Step 5: Press the connected terminal vertically into the slot of the aluminum body so that the upper surface of the terminal is lower than the plane of the connected aluminum body.

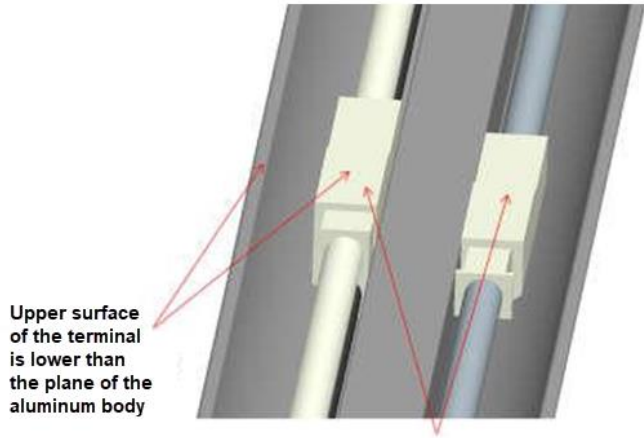

Step 6: Confirm that the lamp (A) and lamp (B) are tightly aligned and connected with the lamp cover. Then fasten the locking screw along the back-screw hole of lamp (B). Connection will be complete after.

