

POST TOP LIGHT INSTALLATION INSTRUCTIONS

LOD-PT60W-XXK	POST TOP LIGHTING FIXTURE
LOD-PT80W-XXK	POST TOP LIGHTING FIXTURE
LOD-PT150W-XXK	POST TOP LIGHTING FIXTURE



IMPORTANT


READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.

FIXTURE ASSEMBLY

1. Feed the (3) Housing wires through one of the three Rods.
2. Screw the top of (3) Rods into the Housing. Be sure the Housing clips are properly engaged onto the Rods.
3. Feed Fixture Wires through the Tenon Pole Adaptor.
4. Slide Tenon Pole Adaptor on three Rods. Be sure the notches face the inside of the Tenon Pole Adaptor.
5. Put the Rubber mat into the Adaptor
6. Tighten the (3) Set Screws at the Tenon Pole Adaptor to secure Rods.

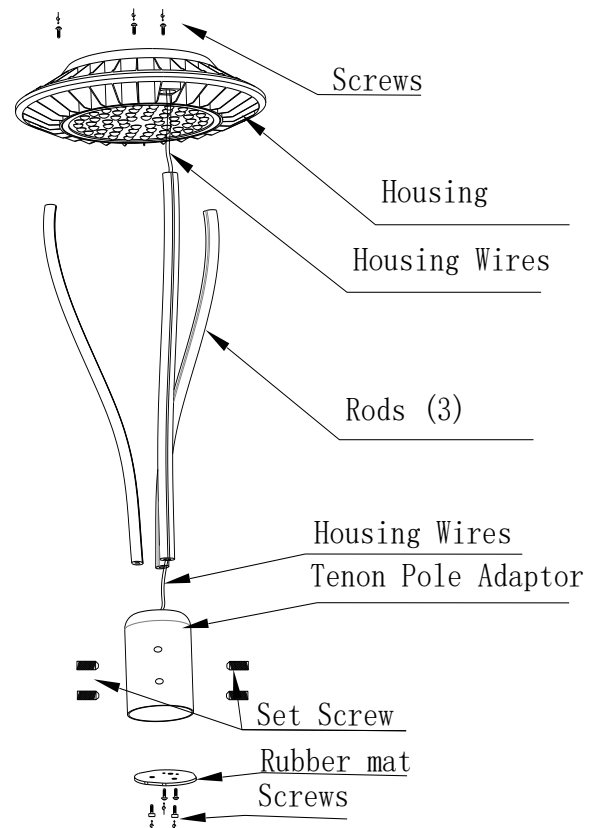


POLE MOUNTING

1. Make the wiring connections with UL approved connectors knot the wires for strain relief.
2. Tenon Pole Adaptor can fit tenon with 3" or 2 3/8" diameter. Slip Tenon Pole Adaptor over tenon. For 3" tenon use shorter (3/8") tenon set screw and for 2 3/8" tenon use longer (7/8") tenon set screws to secure the fixture to the tenon.


WIRING

Universal voltage driver permits operation at 100V to 277VAC, 50 or 60Hz except fixtures factory ordered with a 120V photocell (/PC).

1. Connect the black fixture line to the (L) Live line supply wire.
2. Connect the white fixture line to the (N) Neutral line supply wire.
3. Connect the green fixture line to the (G)

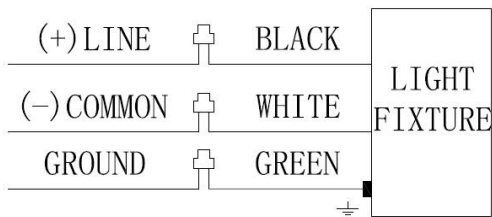

Without photocell

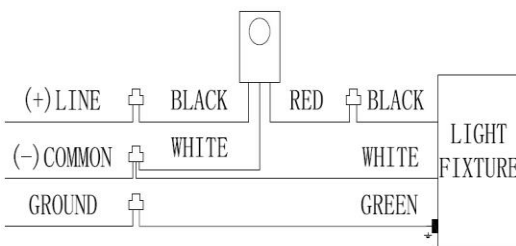

With photocell

CLEANING & MAINTENANCE:

CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.

1. Clean glass lens with non-abrasive glass cleaning solution.
2. Do not open fixture to clean the LED. Do not touch the LED

TROUBLESHOOTING

1. Check that the line voltage at fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation operation or maintenance.

0-10V DIMMABLE WIRING

Universal voltage driver permits operation at 120V thru 277V, 50 or 60 Hz. For 0-10V Dimming, follow the wiring directions as in fig. 4.

1. Connect the black fixture lead to the (+) LINE supply lead.
2. Connect the white fixture lead to the (-) COMMON supply lead.
3. Connect the GROUND wire from fixture to supply ground. Do NOT connect the GROUND of the dimming fixture to the output.
4. Connect the purple fixture lead to the (V+) DIM lead.
5. Connect the gray fixture lead to the (V-) DIM lead.
6. Cap the yellow fixture lead, if present. Do NOT connect.

